



# sonim<sup>®</sup> XP5s USER GUIDE



## GENERAL INFORMATION

### Copyright © 2018 Sonim Technologies, Inc.

Sonim and the Sonim logo are trademarks of Sonim Technologies, Inc. Other company and product names may be trademarks or registered trademarks of the respective owners with whom they are associated.

### DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste, but must be taken to separate collection at their end-of-life.

### DISPOSAL OF BATTERY



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

### GUIDELINE FOR HEADPHONE AND EARPHONE



To prevent possible hearing damage, please do not listen at high volume levels for long periods.

### REGISTER YOUR PHONE

Please register your phone at [http://sonimxperience.com/registration\\_portal/portal/registration.php](http://sonimxperience.com/registration_portal/portal/registration.php) to receive product information and updates.



Sonim devices are covered by a 3-Year comprehensive warranty. The battery is covered by a 1-Year warranty.

Congratulations on the purchase of a Sonim XP5s (XP5800) mobile phone! This phone is LTE enabled and has an intuitive feature-rich user interface, which allows you to make the best use of offered functions.

### PHONE MODELS COVERED

This user guide covers the Sonim XP5s phone with the model number XP5800. The model name can be seen on backside of the phone.

### SONIM SUPPORT INFORMATION

For additional product and support information, visit [www.sonimtech.com](http://www.sonimtech.com).

### OPTIONS COMMONLY USED ACROSS MENU ITEMS

The following are common actions used across various menu items:

<b>OK</b>	Confirms an action. Use the <b>Center</b> selection key to perform this function.
<b>BACK</b>	Use this key to display the previous screen.
<b>MENU</b>	Moves the current working application to the recent applications list/background and displays menu screen.
<b>RECENT</b>	Displays the thumbnails of the applications that you have worked on recently. To remove any application from this list, select <b>Remove</b> from the <b>Option list</b> .

# Table of Contents

## GENERAL INFORMATION 2

Disposal of Old Electrical and Electronic Equipment .....	2
Disposal of Battery .....	2
Guideline for Headphone and Earphone .....	2
Register Your Phone .....	2
Phone Models Covered.....	2
Sonim Support Information .....	2
Options Commonly Used Across Menu Items .....	2

## SAFETY GUIDELINES 5

Avoid High Temperatures.....	6
Personal Medical Devices .....	6
Child Safety.....	6
Emergency Calls.....	6

## BATTERY USAGE 6

Inserting the Battery .....	6
Charging the Battery .....	7
Your SIM Card .....	7
Inserting the SIM Card.....	7
Inserting Memory Card.....	8
Warning.....	8
Verifying and Optimizing Battery Usage.....	8
Tips to Extend the Battery Life.....	8

## GETTING STARTED 10

What is in the Box?.....	10
Phone Specifications.....	10

## USING YOUR SONIM XP5S 11

Switching On the Phone.....	12
Setting Up Your Phone.....	12
Managing Home Screen.....	12
Notification Bar Icons .....	13
Phone Operations Without SIM Card .....	13
Capturing a Screenshot.....	13
Text Entry Options.....	14
To Enter a Word.....	14
To Insert a Number.....	14

## HOME SCREEN MENU OPTIONS 15

My Notifications.....	15
Wallpaper .....	15
Search.....	15

Home Screen Shortcuts.....	15
System Settings.....	15
Manage Apps.....	15

## QUICK SETTINGS 16

Wi-Fi.....	16
Bluetooth.....	16
Torch .....	16
Airplane Mode.....	16
Profiles .....	16

## MISSED EVENTS 16

## MANAGING WIRELESS & NETWORK

### SETTINGS 17

Wi-Fi.....	17
Bluetooth.....	17
Data Usage .....	18
More .....	18

### MANAGING DEVICE SETTINGS 20

Display .....	20
Sound.....	20
Apps.....	21
USB Power Saving .....	22
Storage.....	22
Battery.....	22
Memory.....	22
Gesture .....	22

### MANAGING PERSONAL SETTINGS 23

Home Screen Shortcuts .....	23
Emergency Info.....	23
Location .....	23
Security .....	23
Programmable Key.....	24
Language & Input .....	24
Factory Reset.....	24

### MANAGING SYSTEM SETTINGS 25

Date & Time .....	25
Accessibility .....	25
About Phone.....	25

<b>MANAGING CONTACTS</b>	<b>26</b>
Adding a New Contact .....	26
Viewing Contact Details .....	26
Sending a Message from Contacts .....	26
Dialing a Number from Contacts.....	26
Editing the Contact Details.....	26
Menu Options .....	26
Managing Contact Settings.....	28
<b>MANAGING CALL SETTINGS</b>	<b>29</b>
Making a Call .....	29
Dialing a Number via Contact .....	29
Adding a Contact from Home Screen .....	29
Viewing Call History .....	29
Deleting Call History .....	29
Speed Dial Settings .....	29
Call Settings.....	29
<b>SENDING MESSAGES</b>	<b>31</b>
Sending SMS/MMS Messages .....	31
Search .....	31
Managing Message Settings.....	32
Deleting Messages .....	32
<b>BELL PUSH-TO-TALK SERVICES</b>	<b>33</b>
<b>SONIM SCOUT</b>	<b>34</b>
Setup.....	34
Utilities.....	34
Support .....	34
<b>APPLICATIONS</b>	<b>35</b>
Music.....	35
FM Radio.....	35
File Explorer .....	36
Backup and Restore .....	36
Downloads .....	36
<b>TOOLS</b>	<b>37</b>
Clock .....	37
Calculator.....	37
Sound Recorder .....	37

<b>OTHER APPLICATIONS</b>	<b>38</b>
Camera.....	38
Calendar .....	38
Browser.....	38

<b>REGULATORY INFORMATION - USA</b>	
<b>MARKET</b>	<b>39</b>
RF Exposure Information (SAR) .....	39
Federal Communication Commission Interference Statement.....	39
FCC Caution .....	40
ISED RF Exposure Statement (IC).....	40
ISED Notice.....	40

<b>HAZARDOUS LOCATION USAGE WARNING</b>	<b>41</b>
---	-----------

<b>INDEX</b>	<b>42</b>
--------------	-----------

## SAFETY GUIDELINES

Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.



Do not use the phone at a refueling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.



Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.



Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.



Do not expose the device to high temperatures (in excess of 55°C (131°F)).



Adhere to road safety laws. Do not hold/use a phone while you are driving; you must find a safe place to stop first. Use a hands-free microphone while you are driving.



Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only Sonim XP5800 approved charging equipment to charge your phone and avoid damage to your phone.



The symbol of the crossed-out wheeled bin indicates that this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection at their end-of-life.



Ensure that only qualified personnel install or repair your phone.

The Sonim XP5800 is water-proof and can be submerged to 2 meters for 30 minutes.

Ensure that the audio connector and the SIM slot are properly closed. This will prevent the deposit of water droplets on the connectors, when the phone is immersed in water.



Water droplets condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets will disappear at room temperature.

The Sonim XP5800 is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect the Sonim XP5800 from salt water, dust and strong impacts.

## AVOID HIGH TEMPERATURES

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. For the best results, try to use the device between -20°C and +55°C (-4°F and 131°F). A device with an overly hot or cold battery, even when fully charged, may temporarily not function. Battery performance is particularly limited in temperatures well below freezing.

## PERSONAL MEDICAL DEVICES

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over a pacemaker; for example, in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and airplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations, other areas with a flammable atmosphere or when close to electro-explosive devices.

## CHILD SAFETY

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

## EMERGENCY CALLS

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore, you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

## WARNING



It is not permissible to connect any external devices to all ports/interfaces (USB, XPand and SecureAudio Connector) in Hazardous areas.

## BATTERY USAGE

The Sonim XP5s phone comes with a removable battery. For any battery related queries, contact Sonim customer support.

 
- Use only a Sonim XP5800 certified battery that is designed for this phone model.
- The use of other batteries may void the warranty terms of your phone and cause damage.
- It is recommended to protect the battery from extreme temperature environments and moisture.
- Please keep the battery out of the reach of children.

## INSERTING THE BATTERY

### 1. UNSCREW COVER


To open the battery cover, rotate both the battery cover screws in a counterclockwise direction (as shown in the figure).

Sometimes, the battery cover may be tight and some extra effort is required to open it. You can use the screwdriver provided to open the screws.

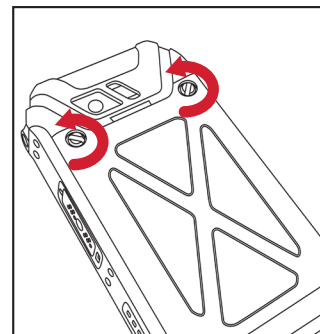


### 2. LIFT THE COVER

 Lift the back cover to reveal the battery slot.

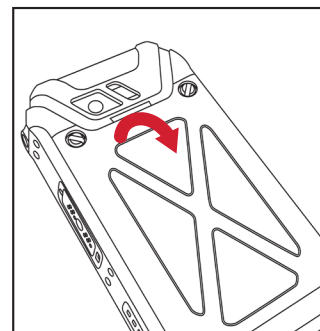


### 3. INSERT BATTERY

 Insert the battery and flush it into the battery slot such that the three metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.

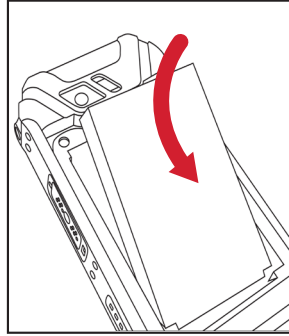


### 4. CLOSE COVER

 Close the battery cover. Rotate the battery cover screws in a clockwise direction. You can use the screwdriver provided to tighten the screws. Ensure not to over-tighten the screws.

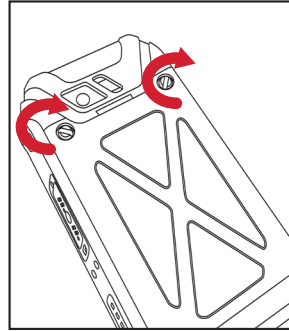


## CHARGING THE BATTERY

The battery delivered with your mobile phone is not fully charged. We recommend that you charge your mobile phone for 5 hours before you use your mobile phone for the first time.

 Only the power supplies with outputs meeting the SELV requirements can be used for charging. The maximum allowable input voltage for the phone is 9v.

 There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

 If the battery is completely out of charge, it can take several minutes for the charging icon to appear when the charger is connected.

### 1. INSERT CHARGER

Insert the charger plug into a power outlet.

### 2. CONNECT TO THE PHONE

The charging port is located in the lower side of the phone, below the back cover. Insert the charger connector to the charging port.

### 3. CHARGING ANIMATION/ICON

- If the battery is being charged when the phone is switched off, a battery charging animation with the current battery level is displayed.
- If the battery is being charged while the phone is switched on, the battery icon on the status bar shows the animation indicating that the battery is being charged.
- Once the battery is fully charged, the charging animation is displayed and a pop-up message **Battery is full Please unplug the charger** is displayed.



 
## YOUR SIM CARD

Purchase a SIM card from a mobile operator. The SIM card associates your network services (for example, phone number, data services, etc.) with your phone.

## INSERTING THE SIM CARD


### 1. UNSCREW COVER

Use the included screwdriver to unscrew the two battery cover screws on the back of the phone.

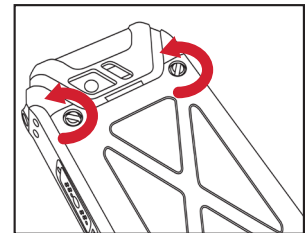


## 2. LIFT THE COVER

 Remove the battery cover and the battery.

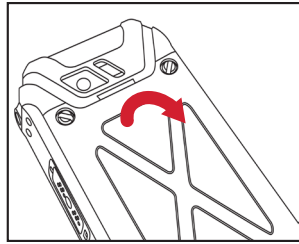

## 3. INSERT SIM CARD

 
Open the SIM card tray 1. Insert the SIM card and lock the SIM card tray into place.

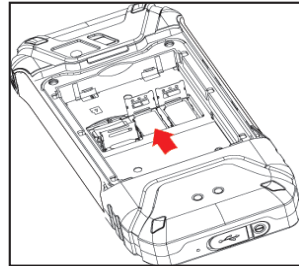

## INSERTING MEMORY CARD


### 1. SLIDE THE SILVER CLIP

 Slide (push forward) and lift the silver clip over the designated slot located beside the SIM card slot (as shown in the figure).

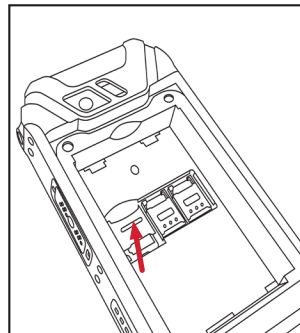

### 2. PLACE THE MEMORY CARD

 Place the memory card in the designated slot and close the silver clip (as shown in the figure).

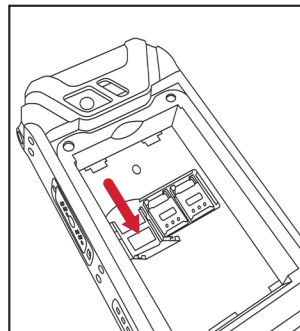

## WARNING



FOR SAFETY REASONS, THE BATTERY CAN ONLY BE REPLACED IN A NON-HAZARDOUS LOCATION.

## VERIFYING AND OPTIMIZING BATTERY USAGE

With your XP5s, you are able to check the battery usage status, and in order to conserve battery power, it is recommended to close applications you are not actively using. Select **Settings** (⚙️) > **Device** > **Battery** (🔋).

The current battery level (charging or not charging) is displayed on the top of the screen. The discharge graph on the top of the screen shows the battery level over time since you last charged the device, and how long you have been running on battery power.

The list at the bottom of the screen shows the breakdown of battery usage for individual apps and services. Select any listed items to view more details. The details screen for some apps includes buttons that allow you to adjust the settings affecting power usage, or stop the application completely.



If you stop some apps or services, your device may not work correctly.

## TIPS TO EXTEND THE BATTERY LIFE

Follow these tips to extend your phone's battery life.

- If you are not using Wi-Fi, Bluetooth or GPS, use the **Settings** to turn them off. The GPS setting is located in **Settings** > **Personal** > **Location**.
- Set screen brightness to **Low** and set a shorter Sleep timeout (15 seconds). The display settings are located in **Settings** > **Device** > **Display**.
- If you are travelling and do not have access to mobile data or Wi-Fi network, switch to Airplane mode. Select **Airplane mode** from **Quick Settings**.



## GETTING STARTED

### WHAT IS IN THE BOX?

The list of items in the Sonim XP5s phone box are:

- Sonim XP5s
- Battery
- Wall Charger
- USB-C Cable
- Screwdriver
- Quick Start Guide

### PHONE SPECIFICATIONS

FEATURE	DESCRIPTION
<b>Chipset</b>	Qualcomm MSM8920
<b>Band</b>	<b>GSM:</b> 850/900/1800/1900MHz <b>UMTS:</b> I/II/IV/V/VIII <b>LTE:</b> B1/B2/B3/B4/B5/B7/B8/B12/ B13/B14/B25/B26/B28/B30/B38/ B41/B66
<b>Antenna</b>	MIMO antenna for LTE
<b>Wi-Fi</b>	Support 802.11 a/b/g/n/ac/e/k/r/h Support max 10 connections hotspot
<b>Memory</b>	16GB eMMC 5.1/ 2GB LPDDR3
<b>CONNECTIVITY</b>	
<b>Bluetooth</b>	BT4.x with BLE
<b>Languages Supported</b>	English and Français
<b>Capacity(mAh)</b>	3180mAh, removable Li-ion
<b>Battery Life</b>	Standby: up to 675 hours Talk time: up to 21 hours Music playback: up to 11 hours Video playback: up to 8 hours Web browsing: up to 18 hours
<b>PHYSICAL CHARACTERISTICS</b>	
<b>Ambient temperature</b>	-20°C to +55°C
<b>Size</b>	141mm x 63.9 mm x 23mm

FEATURE	DESCRIPTION
<b>Weight</b>	approx. 260 gms
<b>Dedicated keys</b>	PTT Key/Power Key/Volume key (Up and Down)/Speaker key/ Emergency key
<b>Ports</b>	Water-proof USB 2.0 type-C, High Speed, OTG
<b>DISPLAY</b>	
<b>Size</b>	2.64"
<b>Resolution</b>	320x432 Transmissive
<b>Outdoor Visibility</b>	Yes
<b>Capacity</b>	262K colors
<b>Brightness</b>	400
<b>AUDIO</b>	
<b>Microphone</b>	3 Mics with noise cancellation
<b>Speaker</b>	Front Dual Loud Speaker, HD voice and wideband support
<b>MULTIMEDIA</b>	
<b>Audio Formats</b>	AMR-NB, AMR-WB, AAC, AAC+, AAC+V2, MP3,V-SELP, AMR 12.65, AMR 6.6,
<b>Video Formats</b>	3GP,MP4, WMV, AVI, MOV, MPEG-2, MPEG-4,H.263, H.264, H-265
<b>Image Formats</b>	JPEG
<b>Graphic Formats</b>	JPEG, PNG, and BMP
<b>FM Radio</b>	Yes
<b>Camera</b>	5MP FF Rear camera, no front camera
<b>LED Torch Light</b>	Yes, also used for camera flash

## USING YOUR SONIM XP5s



1. Sonim XPand Connector
2. Microphones
3. USB-C
4. Volume Up/Down
5. PTT Button
6. App Tray
7. Options
8. Clear
9. Answer/Accept
10. Voicemail (Press and Hold)
11. Lock/Unlock Keypad (Press and Hold)
12. Select/Center key
13. Navigation
14. End/Reject/Power ON & OFF (Press and Hold)
15. Speakerphone
16. Back
17. Display
18. Battery Level Indicator
19. Notification Bar
20. Receiver
21. LED Notification
22. Sonim SecureAudio Connector
23. Emergency Button
24. Charging Pins
25. Battery Under Door
26. SIM Card Slots Under Battery
27. Memory Card Slot Under Battery
28. Battery Door
29. Rear Flash
30. Rear Facing Camera

## SWITCHING ON THE PHONE

To turn your phone on, press and hold the **ON/OFF** red power button for 2 seconds. This key is located just above the 3 key on the keypad.

When the phone is switched on, it tries to register with the network. After successful registration, the name of the service provider is displayed.



Ensure that a valid SIM card is inserted in your phone.

## SETTING UP YOUR PHONE

For instructions on using your phone's buttons, charger, battery and other hardware features, check the printed Quick Start Guide provided along with your phone.

 
When you power **ON** the phone for the first time, a Welcome screen is displayed.

To set up your phone, select Start and follow the instructions as shown on the screen.

Press **OK** on the Welcome guide to use the phone.

## MANAGING HOME SCREEN


After you complete the phone setup, the home screen is displayed. The home screen is the beginning point to access all the device's features.

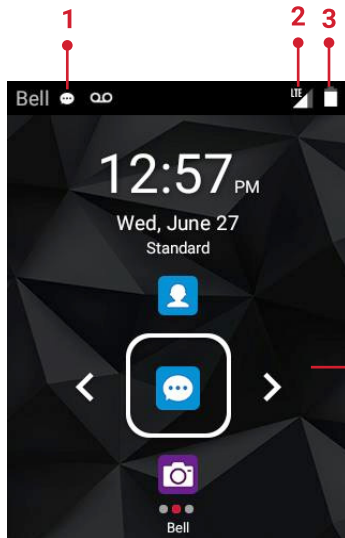

1. Alert Notifications
2. Service Indicator and Signal Strength Bar
3. Battery Charge Indicator
4. Home Screen

## KEY DESCRIPTION

The navigation keys are located below the display screen.


















KEYS	DESCRIPTION
	<b>Back:</b> Opens the previous screens in the working sequence till the home screen is displayed. Once the home screen is displayed, it remains there even when you press the back key.
	<b>Menu:</b> <ul style="list-style-type: none"><li>• Always positioned in the center of the keypad. Select to view all the applications and device settings.</li><li>• Long press (for 2 seconds) to enable torch light.</li><li>• Double press in unlock condition to launch Recent screen.</li></ul>
	<b>Options:</b> Displays the options for the currently active screen.
	<b>Clear:</b> Clears the entered text and deletes the selected file.
	<b>Speaker:</b> You can place the call on speaker and the icon is enabled only when call is on the speaker.   For better result in a nosiy environment, hold the device 10-15 cm away from your mouth while speaking on a speaker mode.











The **Notifications** on the top of the display screen provide details about various notifications such as missed calls, new messages and missed alarms.

The **System Icons** on the top right side of the screen display the current device status such as wireless and network connection strength and battery level.

## NOTIFICATION BAR ICONS

The icons displayed at the top of the screen provide information about the status of the device. The details such as battery charge status and data service are displayed when the phone is in standby mode. Other indicators such as Bluetooth connectivity status, Airplane mode, Alarm and Call Forward (only if Always Forward is enabled) and Wi-Fi connectivity are displayed, if the feature is activated.

ICONS	DESCRIPTION
	Notification icon
	Battery level indicator
	Battery charging in progress
	No signal
	Signal strength
	No SIM card
	4G LTE network connected
	Wi-Fi connected
	Bluetooth activated
	Call in progress
	Speaker icon
	FM Radio
	Missed call
	New SMS or MMS
	Alarm activated
	Silent mode activated
	Vibration mode activated

ICONS	DESCRIPTION
	Headset connected
	Missed Events notification
	Airplane mode activated
	Error/information notification - attention required
	Screenshot captured
	Music is playing
	Device storage space is running out
	Warranty Registration icon
	PTT Available status icon
	PTT Offline status icon


## PHONE OPERATIONS WITHOUT SIM CARD

You can perform the following operations without inserting a SIM card in your phone:

- Make an emergency call.
- View and modify all settings except data usage and mobile network related settings.
- Activate and share files through Bluetooth.
- Access the Internet using Wi-Fi connectivity.
- Access your phonebook, file explorer, multimedia files, all tools and applications.
- View and modify your profile settings.

## CAPTURING A SCREENSHOT

You can take a screenshot of your current screen and it will be stored in your phone's gallery. To take a screenshot:

1. Ensure that the image to be captured is displayed on the current screen.
2. Press the **Power** and **Volume** down button simultaneously. The screenshot is captured and stored in the gallery. A screen **Capture** () icon is also displayed on the notification bar.

## CHANGING LANGUAGES

In order to change your language when entering a text message or a new contact, you are able to change the language of your device by pressing and holding the \* key.

You can change the **Language** from **English** to **Français** and vice versa.

## TEXT ENTRY OPTIONS

When you enter the text message, you can change the text entry options by pressing the # key. The current text entry options are displayed in the top bar.

The various text entry options are:

- **For English:**
  - **ABC:** Enter all the text in upper case (capitalized).
  - **Abc:** Enter the first letter of the sentence in upper case.
  - **abc:** Enter all the text in lower case.
  - **123:** Enter the numbers.
  
- **For Français:**
  - **FR:** Enter all the text in upper case (capitalized).
  - **fr:** Enter all the text in lower case.
  - **Fr:** Enter the first letter of the sentence in upper case.
  - **123:** Enter the numbers.

## TO ENTER A WORD

1. Start by pressing the numeric keys from 2 through 9 only once for the required letter.
  - Ex 1: To enter the word Good, press 4-6-6-3. The word displays on the screen as you type.
  - Ex 2: To enter the word Hello, press 4-3-5-5-6. The word displays on the screen as you type.
2. If the word does not display correctly, press the right navigation key to scroll through alternative word choices. Press either the center navigation key or 0 key to accept the word.

## TO INSERT A NUMBER

1. Press the key labeled with the number you want and use the navigation key to scroll to that number as above.
2. To insert a symbol, press and hold the numeric key 1 and use the navigation key to scroll and select a symbol.

## DIFFERENT METHODS TO ENTER TEXT

When **English** is selected as input language:

- **T9ABC:** Enter the text based on the T9 dictionary. All the letters are in upper case (capitalized).
- **T9Abc:** Enter the text based on the T9 dictionary. Only the first letter of the sentence is in upper case (capitalized).
- **T9abc:** Enter the text based on the T9 dictionary. All the letters are in lower case.

When **Français** is selected as input language:

- **T9FR:** Enter the text based on the T9 dictionary. All the letters are in upper case (capitalized).
- **T9Fr:** Enter the text based on the T9 dictionary. Only the first letter of the sentence is in upper case (capitalized).
- **T9fr:** Enter the text based on the T9 dictionary. All the letters are in lower case.

## HOME SCREEN MENU OPTIONS

---

In order to see the details about any notifications, from the home screen, select **Options key**.

The following options are displayed:

- My Notifications
- Wallpaper
- Search
- Home screen shortcuts
- System settings
- Manage apps

## MY NOTIFICATIONS

Your missed notifications (e.g. missed calls, new messages, downloads, etc.) will be displayed in the upper left-hand corner of your device.

## WALLPAPER

You can set an image or a photo stored in your phone as your home screen wallpaper.

To change the wallpaper, select from one of the following **Wallpaper** collections.

From Home screen, press **Options key > Wallpaper**. Select **Wallpapers** from the pop-up.

- **Gallery:** includes photos and screenshots taken using the phone's camera.
- **Wallpapers:** includes images that are pre-loaded with the phone.

## SEARCH

You can search for people, places, music, movies, history and many more. Enter the key word in the search bar and the list is displayed.

## HOME SCREEN SHORTCUTS

The navigation **Up**, **Center** and **Down** keys are displayed.

For more information, refer to “Home Screen Shortcuts” on page 22.

## SYSTEM SETTINGS

System settings refers to the following settings:

- “Managing Wireless & Network Settings” on page 16
- “Managing Device Settings” on page 19
- “Managing Personal Settings” on page 22
- “Managing System Settings” on page 24

## MANAGE APPS

You can manage application and force stop them.

For more information, refer to “Apps” on page 20.

## QUICK SETTINGS

---

In order to see the quick settings, on the home screen, select **Left Navigation key**.

The following settings are displayed:

- Wi-Fi
- Bluetooth
- Torch
- Airplane mode
- Profiles

These settings can be enabled or disabled.

### WI-FI

You can enable or disable Wi-Fi settings. For more information, refer to “Wi-Fi” on page 16.

### BLUETOOTH

You can toggle between **ON** and **OFF**. For more information, refer to “Bluetooth” on page 16.

### TORCH

You can set the **Torch ON** and **OFF**.

### AIRPLANE MODE

Toggle the button to enable or disable the airplane mode. For more information, refer to “Activating Airplane Mode” on page 17.

### PROFILES

You can select the profile from the list:

- Standard
- Outdoor
- Silence
- Meeting

For more information, refer to “Sound” on page 19.

## MISSED EVENTS

---

To view the missed events, on the home screen, select **Right navigation key**.

The missed events can be:



- **Missed calls:** When you miss an incoming call, you will receive an event notification.
- **Calendar events:** When you have saved an event such as birthday, travel, etc., and you missed that event on that particular day, a message is displayed in missed events.
- **New messages:** The unread messages are displayed in missed events.
- **Alarm:** A missed alarm is displayed in missed events.
- **New Voicemail:** A new voicemail is displayed in missed events.

# MANAGING WIRELESS & NETWORK SETTINGS

## WI-FI

Wi-Fi is a wireless network technology that can provide Internet access at distances up to 100 feet, depending on the Wi-Fi router and surroundings.

You can access the Internet when you connect your XP5s device to a Wi-Fi network. To connect your phone to a Wi-Fi network:

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Set the **Wi-Fi** to the **ON** position located under **Wireless & networks** settings.
3. Select **Wi-Fi**.  
A list of Wi-Fi access points present within your phone's accessible range will be displayed.
4. Select your preferred network. Enter the WEP/WPS/WPA key (if it is a secured network) and select **Connect**. To verify the password before connecting, enable **Show password**.



It is always recommended to make sure your Wi-Fi network connection is secure and also to connect your phone to a secure network.

## ADD NETWORK

1. In **Wi-Fi** settings screen, select **Options key > Add network**.
2. Enter the following details:
  - Network SSID: The wireless network ID.
  - Security: Set the security type to None, WEP, WPA/WPA2 PSK, 802.1x EAP.
3. Enable **Advanced options** to set the Proxy details and IP settings.
4. Select **Save** to save the network settings.

## CONNECT TO A NETWORK

1. In order to connect to a network, scroll to the network you would like to join and press the center key.
2. On the next window, you will be prompted to enter the network password. Once verified, you will be connected to the network.

## EDIT A NETWORK

1. Press and hold the connected network.
2. Select **Modify network**. You can change the network password. The other network setting details such as **Advanced options**, **Proxy** and **IP settings** can be updated.
3. Select **Save** to save the changes.

## FORGET A NETWORK

1. Press and hold the connected network.
2. Select **Forget network**.  
The selected network gets disconnected and displayed in the Wi-Fi list.

If you have to get connected to the same network, enter password.

## ADVANCED WI-FI

On the Wi-Fi screen, select **Option key > Advanced**. The following options are displayed:

- **Install certificates:** You can browse a certificate for installation.
- **Passpoint on:** You can enable the option. The device prefers Passpoint network over all open networks. If one open network and BELL network are available, the device gives preference to BELL network.
- **Wi-Fi Direct:** Select **Option key > Searching** to search for the peer devices and also select **Rename device** to rename the device.
- **WPS Push Button:** Press the **WPS Push Button** in your router, when prompted.
- **WPS Pin Entry:** Enter the given PIN number on your Wi-Fi router.

## BLUETOOTH

Bluetooth is a short-range wireless communication technology used to communicate between the devices over a distance of about 8 meters.




You can perform the following tasks using Bluetooth paired devices:

- Transfer media files and contacts between connected mobile devices using Bluetooth.
- Use Bluetooth connected headphones for playing media files.
- Bluetooth headset can be used during call.



## PAIRING A BLUETOOTH DEVICE

To activate Bluetooth and pair your XP5s phone with other Bluetooth devices:

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Enable **Bluetooth** (  ), located under **Wireless & Networks** settings. A list of accessible Bluetooth devices are displayed. Ensure that Bluetooth is activated on the other device too.
3. Select your preferred device.
4. To pair with the selected Bluetooth device, select **Pair** in your device. Compare the pairing codes between your device and the other device. The device is displayed in the **Paired devices** list.




## EDITING PAIRED BLUETOOTH DEVICE SETTINGS

1. To rename the paired device, select preferred paired device > press **Center Select Key** and edit the name. Select **OK** to save the name.
2. To unpair the device, select the paired device. Select **Forget** to unpair the device and **Connect** to reconnect with the device.
3. Enable **Media Audio** to connect the Bluetooth device for listening to media files.

## DATA USAGE

Data usage refers to the amount of data utilized by your phone during data transfers through the Internet. The data usage charges are dependent of the wireless plan provided by your service provider.

To monitor your data usage, adjust your data usage settings.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Select **Wireless & networks** > **Data usage** (  ).
3. Press **Option key** > **Cellular networks** to access **Standard data** option.
4. **Usage:** You can see the details about the data usage for a particular time frame.
  - **Data Saver:** Enable **Data Saver** to reduce data usage. Data Saver prevents some apps from sending or receiving data in the background.
5. The following options are present in **Cellular:**
  - **Cellular data:** Enable this option to access Internet using your cellular network.
  - **Cellular data usage:** Displays the data usage for a particular time frame.
  - **Billing cycle:** Data used during your billing cycle is displayed.



- If you would like to receive a notification when your data usage exceeds the preset limit, enable the **Set data warning**.
- **Data warning** shows the data available for a particular time frame.
  - Enable **Set data limit** to set the data usage limit.
- 6. Select **Wi-Fi** > **Wi-Fi data usage**. When Wi-Fi is enabled, it shows the data used for a particular time frame.
  - **Network restrictions:** The background data is restricted for these networks. While downloading apps, you receive a warning message for these restricted networks.

## MORE

### ACTIVATING AIRPLANE MODE



When your phone is set in airplane mode, network connectivity or mobile data connectivity is disabled. But you can access your camera, media files and other features that do not require mobile connectivity.

To activate airplane mode:

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
  - Select **More** located under **Wireless & networks** settings.
2. Enable **Airplane** mode.



### TETHERING & PORTABLE HOTSPOT

You can share your device's mobile data connection via USB/Mobile hotspot/Bluetooth.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Select **Wireless & network** > **More** > **Tethering & portable hotspot**.
3. Enable **USB tethering**. This is enabled only when USB is connected to the device.
4. **Portable Wi-Fi hotspot:** Enable **Portable Wi-Fi hotspot**.
  - **Set up Wi-Fi hotspot:** You can set up a Wi-Fi hotspot by entering the following details:
    - **Network name:** Enter the network name.
    - **Security:** Select the security from the drop-down list.
    - **Password:** The password must have at least 8 characters.
  - **Maximum Connections:** Your XP5s will support up to ten devices through the Wi-Fi Hotspot.
  - **Wi-Fi Hotspot Power Mode:** You can select one of the following options:



- Auto disable Mobile Hotspot after 5 minutes of inactivity
  - Auto disable Mobile Hotspot after 10 minutes of inactivity
  - Do not disable Mobile Hotspot due to inactivity
  - **Connected Devices:** The devices which are connected to the Hotspot are displayed here.
5. Enable **Bluetooth tethering**. When you activate Bluetooth tethering, you can share your phone's Internet connection with other Bluetooth paired devices.

## VPN

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Select **Wireless & Networks > More > VPN**.
3. Select **Options key > Add VPN profile**.  
A confirmation window is displayed with the message **You need to set a lock screen PIN or password before you can use credential storage**. Select **OK** to set the lock selection.
4. In **Edit VPN profile** screen, enter the **Name**, **Type** (select from the drop-down list), and the **server address**.
5. Enter **Username** and **password**.
6. Select **Save**.



## CELLULAR NETWORKS

You can view and set your mobile service provider settings.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Select **Wireless & network > More > Cellular networks**.  
You can use mobile data services such as web browsing and other services over the cellular network.
3. The following options are displayed:
  - **Enhanced 4G LTE Mode:** Enable this option to improve voice and other communications.
  - **Data roaming:** Enable this option to get connected to the data services while roaming.
  - **Preferred network type:** The following options are displayed:
    - LTE/WCDMA/GSM
    - WCDMA/GSM
    - WCDMA Only
    - GSM Only
  - **Access Point Names:** You can view the access points related to your SIM provider.
  - **Network Operators:** Choose the network operator

from the available list.

## NETWORK SETTINGS RESET

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ).
2. Select **Wireless & Networks > More > Network settings reset**.
3. Select **RESET SETTINGS**.  
This will reset all the network settings including Wi-Fi, Cellular data and Bluetooth.

# MANAGING DEVICE SETTINGS

## DISPLAY

- From the **Home** screen, select **Menu** (☰) > **Settings** (⚙️) > **Device** > **Display** (📺).
- Set one of the following options to configure your phone's display:
  - Brightness level:** Set the brightness of the phone display. This also optimizes the battery power consumed.
  - Wallpaper:** Set the wallpaper for your home screen. You can select from one of the following wallpaper collections:
    - Gallery:** includes photos and screenshots taken using the phone's camera.
    - Wallpapers:** includes images that are pre-loaded with the phone.
  - Sleep:** Set the sleep time so that the screen brightness is turned down after specified time of phone inactivity. This setting also optimizes the battery power.
  - Font size:** Set the font size of the text displayed on the screen.

## SOUND

- From the **Home** screen, select **Menu** (☰) > **Settings** (⚙️) > **Device** > **Sound** (🔊).
- Select **Profile** and the following options are displayed:

OPTION	DESCRIPTION
<b>1. Standard</b>	Set to <b>Standard</b> and select <b>Option key &gt; Edit</b> .
<b>Sound</b>	<ul style="list-style-type: none"> <li>You can set Media volume, Ring volume, Alarm volume, Phone ringtone, Default notification ringtone.</li> <li>You can enable the <b>Vibrate when ringing</b>.</li> </ul>
<b>Other Sounds</b>	You can set <b>Screen lock sounds, Charging sounds, and key press tones</b> .




OPTION	DESCRIPTION
<b>Notification</b>	<ul style="list-style-type: none"> <li>If Pulse LED light is enabled, battery status indication is not affected.</li> <li>If Flash notification alert is enabled, when battery is above 20% level, you can use camera flash light for missed events.</li> <li>If Flash call alert is enabled, you can use the camera flash light for incoming voice call.</li> </ul>
<b>2. Outdoor</b>	Set to <b>Outdoor</b> and select <b>Option key &gt; Edit</b> .
<b>Sound</b>	<ul style="list-style-type: none"> <li>You can set Media volume, Ring volume, Alarm volume, Phone ringtone and Default notification ringtone.</li> <li>You can enable the <b>Vibrate when ringing</b>.</li> </ul>
<b>Other Sounds</b>	You can set <b>Screen lock sounds, Charging sounds and key press tones</b> .
<b>Notification</b>	<ul style="list-style-type: none"> <li>If Pulse LED light is enabled, battery status indication is not affected.</li> <li>If Flash notification alert is enabled, when battery is above 20% level, you can use the camera flash light for missed events.</li> <li>If Flash call alert is enabled, you can use the camera flash light for incoming voice call.</li> </ul>
<b>3. Silence</b>	Set to <b>Silence</b> and select <b>Option key &gt; Edit</b> .

OPTION	DESCRIPTION
<b>Sound</b>	When set to <b>Silence</b> mode, this profile blocks all sounds and vibrations including alarms, music, videos and games. You will be able to make phone calls.
<b>Notification</b>	<ul style="list-style-type: none"> <li>• If Pulse LED light is enabled, battery status indication is not affected.</li> <li>• If Flash notification alert is enabled, when battery is above 20% level, you can use the camera flash light for missed events.</li> <li>• If Flash call alert is enabled, you can use camera flash light for incoming voice call.</li> </ul>
<b>4. Meeting</b>	Set to <b>Meeting</b> and select <b>Option key &gt; Edit</b> .
<b>Sound</b>	You can set Media volume and Alarm volume.





Apart from default profiles, user can create customized profiles.

To create a new profile:

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Sound** (  ).
2. Select **Profiles** > **Option key** > **Create new**.
3. Enter the desired **profile name**. Maximum length of 24 characters is allowed for the profile name and the name should be unique.
4. After modifying the necessary sound and notification settings, save the new profile.

#### QUICK PROFILE SWITCH

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Sound** > **Profile**.
2. Select **Quick Profile Switch**.  
You can use this option to quickly switch profiles via home screen shortcut and Speaker key.

#### SOUND

- **Media Volume:** You can increase, decrease and mute the media volume.
- **Alarm volume:** You can increase, decrease or mute the alarm volume.
- **Ring volume:** You can change the ringer volume to no ringer or ringing.
- **Also vibrate for calls:** Enable this option to set the device on vibration for calls.
- **Phone ringtone:** You can select the desired ringtone from the list.
- **Default notification ringtone:** Set the default notification ringtone from the list.
- **Hac mode:** Enable this option to make your device hearing aid compatible.
- **Silence during call:** Turn on this option to enable silence during the call.

#### OTHER SOUNDS

- **Screen lock sounds:** Enable or disable this option.
- **Charging sounds:** Enable or disable this option.
- **Key press tones:** Enable or disable this option.

#### NOTIFICATION




- **Pulse LED light:** If Pulse LED light is enabled, Pulse LED light is used to display notification alert and the battery status indication is not affected.
- **Flash notification alert:** If Flash notification alert is enabled, when battery is above 20% level, you can use camera flash light for missed events.
- **Flash call alert:** If Flash call alert is enabled, you can use the camera flash light for incoming voice call.

#### VOICE NOISE CANCELLATION




By default, FENS is enabled and reduces the noise cancellation.

#### APPS




If an application is not performing as expected, you may **Force Stop**. To do so:

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Apps** (  ).
2. Select the application you would like to force stop and select **Force Stop**.
3. Select **Options key**. The following options are displayed:
  - Advanced
  - Show system
  - Reset app preferences




## USB POWER SAVING

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **USB Power Saving** (  ).
2. **Automatic Power ON:** If enabled, the device gets automatically powered **ON** when the USB is connected.
3. **Automatic Power OFF:**
  - **Automatic Power OFF:** If enabled, the device will be automatically powered **OFF** at the set time.
  - **Power off device at:** If you enable Automatic power off, this option will be active. You can set the time frame for the device to be powered off.
  - **Automatic power OFF:** If this is enabled, upon USB disconnection, the device will be powered off after the set hours.
  - **On USB disconnect, power off:** You can set the hours for the device to be powered off once the USB is disconnected.

## STORAGE

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Storage** (  ).
2. On **Internal shared storage**, the following options are displayed with memory used for each app:
  - Shows the used memory
  - Apps
  - Images
  - Videos
  - Audio
  - System
  - Other
  - Cached data
  - Explore

## BATTERY




1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Battery** (  ).
2. To activate the **Battery Saver** option, select any of the following levels when this should activate:
  - Never
  - at 5% battery
  - at 15% battery




Battery saver turns off automatically when your device is charging.

You can also view the battery usage data.

## MEMORY

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Memory** (  ).
2. Go to **Memory** and select the time from the drop-down list. You can view the applications usage based on the set time frame.
3. Select **Memory used by apps** to check the memory used for each application for the set time frame.




## GESTURE

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Device** > **Gesture** (  ).
2. Enable **Toggle Torch**.
3. To quickly toggle torch, shake the device twice.

# MANAGING PERSONAL SETTINGS




## HOME SCREEN SHORTCUTS

You can set the shortcuts on the home screen.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
2. Select **Home screen shortcuts** (  ).
3. Go to the **Navigation up key** and select the app to be set for the up navigation key.
4. Go to the **Navigation center key** and select the app to be set for the center navigation key.
5. Go to the **Navigation down key** and select the app to be set for the down navigation key.


## EMERGENCY INFO

You can enter the emergency information to be viewed during an emergency.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
  2. Select **Emergency Info** (  ).
  3. Go to **My information** and enter the following details:
    - First name
    - Last name
    - Phone number
    - Email address
    - Address
    - Blood type
    - Allergies
    - Medication
    - Organ donor
  4. If you do not want to enter any of the above details, select **Skip**.
  5. The **Add** screen is displayed and you can select the contact from the phonebook by selecting **Select contact**.
- OR
6. Select **Add new**. Enter **First name**, **Last name**, and **Phone number**. Select **Add**.  
This contact is added under Emergency contacts list.




## LOCATION

You can enable and configure the Location settings.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
2. Select **Location** (  ). Enable and modify required security settings.
3. Set the **Location Mode** to one of the following options:
  - **High accuracy:** uses AGPS, Wi-Fi, mobile networks, and other sensors to get the highest-accuracy location for your device. It uses location help to estimate your location faster and more accurately.
  - **Battery saving:** allows your device to estimate your location using low battery-intensive location sources, such as Wi-Fi and mobile networks. It uses location help to estimate your location faster and more accurately.
  - **Device only:** allows your device to estimate your location using GPS only. It uses the satellite information to provide location information. This mode may use more battery power and take longer time to determine your location.
4. You can also view the apps which have requested location recently under **Recent location requests**.

## SECURITY




You can activate and protect your phone from unauthorized access by configuring the security settings.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
2. Select **Security** (  ).
3. Select **Device security** > **Screen lock** and select one of the following options to configure the phone:
  - None
  - Press and hold \* key
  - **PIN:** When enabled, enter you own PIN value. When the phone is locked, unlock it using the PIN. When the phone is locked, you can answer an incoming call, without unlocking the phone.
4. **Encryption:** By default, the phone is already encrypted.
5. **SIM card lock:** Select **Set up SIM card lock** to view the SIM settings.
  - **Lock SIM card:** You can set a PIN to use the phone.
  - **Change SIM PIN:** You can change the SIM PIN.

6. Enable **Make password visible** option to view the password characters.
7. **Device administration:**
  - **Device administrators:** You can view or deactivate the device administrator.
  - **Unknown sources:** When enabled, it allows installing the apps from unknown sources.
8. **Credential storage:**
  - **Storage type:** Displays the storage type.
  - **Trusted credentials:** You can view and verify the system and user certificates.
  - **Install from SD card:** You can view and install new user certificates from SD card.
  - **Clear credentials:** You can remove all certificates.
9. **Advanced:**
  - **Trust agents:** To use this option, a screen lock should be set.
  - **Apps with usage access:** Select the app and select center key to enable/disable the **Permit usage access**.




## PROGRAMMABLE KEY

You can assign any application to the programmable key.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
2. Select **Programmable key** (  ).

## LANGUAGE & INPUT

You can set the phone's language to any of the languages displayed in the language list.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
2. Select **Language & input** (  ).
3. Go to **Languages** and select any language from the list as your preferred language.  
The following languages can be set as a preferred language:

- English
- Français

All the menu items and user feedback messages will get displayed in the set language.

4. Select **Keyboard & input methods > FlexT9 Text Input**.
  - **Input languages:** You can set the input language to either **English** or **Français**.
  - **Personal Dictionary:** The default keyboard input language is set to English (US)/French (Canadian) - T9 format. This cannot be modified. You can add a




custom word to the personal dictionary.

### • Preferences:

- **Auto-capitalization:** The first letter of the new sentence is automatically capitalized.
  - **Auto-punctuation:** If this option is enabled, when you press the space key twice at the end of the word to insert a period.
  - **Language switch key:** Press and hold the \* key to switch the language.
  - **Next Word Prediction:** Predicts a next word based on the previous word entered.
  - **Suggest contact names:** Displays suggested contact while typing.
5. Select **Support > FlexT9 Help**. It displays FlexT9 help guide. Select **Support > About**. It displays the FlexT9 version details.
  6. Select **Speech > Text-to-speech output**. You can set and reset the **Speech rate** and **Speech Pitch**.

## FACTORY RESET




You can erase all the data from your phone's internal storage.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **Personal**.
2. Select **Factory Reset** (  ).
3. You can erase all data from your phone's internal storage which includes:
  - System and app data and settings
  - Downloaded apps
  - Music
  - Photos
  - Other user data

# MANAGING SYSTEM SETTINGS




## DATE & TIME

You can set and display the date and time on the phone. You can also select the display format.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **System**.
2. Select **Date & time** (  ).
3. Select the following options to configure your phone:
  - To synchronize the date and time with the network provided time, enable **Automatic date & time**.
  - To synchronize the time zone with the network provided time, enable **Automatic time zone**.
  - To set the date manually, select **Set date**. Scroll and select the date, month and year. Select **OK**.
  - To set the time manually, select **Set time**. Scroll and select the hour and minute. Select **OK**.
  - To set the time zone, select **Select time zone**. Scroll and select your time zone.
  - To set the clock to 24-hour format enable **Use 24-hour format**. By default, the phone is set to **12-hour format**.

## ACCESSIBILITY




You can make websites and applications more accessible to people with disabilities when they are using mobile phones and other devices.

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **System**.
2. Select **Accessibility** (  ).
3. Select **Services**.
  - **SCOUT by AetherPal**: Enable the privacy feature of Remote Management Service by moving the toggle to **ON**.
  - **Talkback**: When Talkback is enabled, it helps vision-impaired users interact with their devices. It uses spoken word, vibration and other audible feedback to let you know what is on your screen.
4. Select **System**.
  - **Captions**: When Captions is **ON**, you can set the following options under **Standard options**:
    - Language
    - Text size
    - Caption style
  - **Font size**: You can set the font size from smaller to

larger and see the preview of the same.

- **Mono Audio**: Enable **Mono audio** to combine the channels when playing audio.
- **Vibrate on Keypress**: If this option is enabled, on each keypress the device will vibrate.
- **Sound balance**: You can adjust the left and right volume balance.
- **Text-to-speech output**:
  - **Preferred engine**: The preferred engine is set.
  - **General**: You can adjust the **Speech rate** and **Pitch**. Reset the speech rate and speech pitch. You can demonstrate a speech synthesis. English is set as default language status.

## ABOUT PHONE

1. From the **Home** screen, select **Menu** (  ) > **Settings** (  ) > **System**.
2. Select **About phone** (  ).
3. Go to **System Updates** and **Check for Updates**. If updates are available, the device will begin the updates.
4. The following information is displayed:
  - System Updates
  - Status
  - Legal Information
  - Model
  - Firmware version
  - Firmware security patch level
  - Baseband version
  - Kernel version
  - Build number



## MANAGING CONTACTS

You can use the phonebook to maintain phone numbers of your contacts. This feature enables you to add, dial phone numbers and send SMS and MMS messages.

To access the contacts, from the **Home** screen, select **Contacts** (👤). The contacts saved in the phonebook are displayed.

After inserting the SIM, when you switch the device **ON** for the first time and there are no contacts added in the device or SIM, you have two options:

- **Add Contact:** Add **New contact** screen is displayed. Enter the details and select **Options key > Save** to save the contact.
- **Import Contacts:** Select **Import Contact** to import from .vcf file or import from SIM card.

### ADDING A NEW CONTACT

1. From the **Home** screen, select **Menu** (☰) > **Contacts** (👤).
2. To add a new contact, select **Menu > Contacts > Option key > Add contact**. Enter the contact details and select **Option key > Save** to save the contact.
3. You can also enter a number using dialpad and select **Add to contact** (👤) and then **Create new contact** (👤) to add a new contact. Select **Option key > Save** to save the contact.

### VIEWING CONTACT DETAILS

1. From the **Home** screen, select **Menu** (☰) > **Contacts** (👤).
2. Scroll to the desired contact and select the contact to view the contact details.

### SENDING A MESSAGE FROM CONTACTS

You can send SMS and MMS messages to the contacts.

1. From the **Home** screen, select **Menu** (☰) > **Contacts** (👤).
2. Scroll to the desired contact and open it.
3. Select **Option key > Send message**.
4. Enter the message and select **Option key > Attach photos/videos** to attach the photos and videos.

5. Select **Option key > Send**.



If you attach a media file or a contact to your SMS message it is converted to an MMS message automatically.

### DIALING A NUMBER FROM CONTACTS

1. From the **Home** screen, select **Menu** (☰) > **Contacts** (👤).
2. Scroll to the desired contact and select the contact to view the details.
3. Select the number and press **Center** key to initiate the call. **OR**
4. Select the desired contact from the list and press the green button on the phone to initiate the call.

### EDITING THE CONTACT DETAILS

1. From the **Home** screen, select **Contacts** (👤).
2. Scroll to the desired contact and select the contact to view the details.
3. Select **Option key > Edit**.
4. Edit the desired details. Select **Option key > Save** to save the details.

### MENU OPTIONS

On the **Contacts** screen, select **Options key** to view the menu options. Following are the menu options:

#### ME:

1. Select **Me** and a screen is displayed to add device owner's name, Phone number and an email address. Select **Option key > Save** to save the contact details.



If contact details of **ME** are not saved, the **Menu** options are not displayed.



- Select **Option key** and you have the following options:
  - **Send message:** You can select either email or the phone number to send a message.
  - **Edit:** You can edit the contact details.
  - **Share:** You can share your contact details via **Messaging** and **Bluetooth**. The contact is shared as a .vcf file.
  - **Copy to SIM:** You can copy the contact from the device to SIM.
  - **Send Contact:** The contact is sent as a text message to the selected contact.

## ADD CONTACT

You can add a new contact by entering all the details. Select **Options key > Save** to save the contact.

## IMPORT/EXPORT



### IMPORT FROM .VCF FILE

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Select **Option key > Import/export**.
3. Select **Import from .vcf file**.
4. Press **Center** key to select the .vcf file to be imported.
5. Select **OK**.  
The contact is imported to the list.





If the device has only one .vcf file, it is imported without any selection window.



### IMPORT FROM SIM CARD

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Select **Option key > Import/export**.
3. Select **Import from SIM card**.  
The list of contacts stored in your SIM card are displayed.
4. Select the contact to be moved to the phone.
5. Select **Option key > Done**.
6. A confirmation message is displayed. Select **OK** to confirm.  
  
The contact is imported to the phone address book.

### EXPORT TO SIM CARD



1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Select **Option key > Import/export**.
3. Select **Export to SIM card**.
4. Select the contact to be exported from Phone to the SIM card.
5. Select **Option key > Done**.  
The contact is exported to the SIM card.

## EXPORT TO .VCF FILE

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Select **Option key > Import/export**.
3. Select **Export to .vcf file**.
4. Press **Center** key to select the contact to be exported.
5. Select **Option key > Done**.  
A message is displayed for the location, where the .vcf file saved.
6. Select **OK** to confirm.  
The .vcf file is exported to the device internal memory.

## SHARE ALL CONTACTS

You can send contact information in two different ways:

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Select **Option key > Import/export**.
3. Select **Share all contacts**. You can use one of the following options to share the desired contact:
  - **Messaging**: Send the contact details as a multimedia message to any mobile phone.
  - **Bluetooth**: Send the contact details to a Bluetooth device paired with your phone. Select a Bluetooth device to share the contact.

## BLOCKED NUMBERS



You cannot receive either a call or a text message from any blocked number.

## SELECT

You can select the desired contacts by checking the boxes next to the contact.



## SETTINGS

You can set the sort list to view the contacts and also the first or last name of the contact to be displayed first.




1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Select **Options key > Settings**. Set the following options:
  - **Sort by**: Sort the contact names by first name or last name.
  - **Name format**: Set the contact display name to first name or last name.

## MANAGING CONTACT SETTINGS

You can edit and modify ringtone and call receiving settings for individual contacts.

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Scroll to the desired contact and select the contact to view the contact details.
3. Select **Options key** and select one of the following:
  - **Set Ringtone** to set a specific ringtone for that contact.
  - Check the option **All calls to voicemail** to forward all incoming calls from that contact to your voicemail box.

## DELETING A CONTACT

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Scroll to the desired contact and select the contact to view the contact details.
3. Select **Options key** > **Delete** or press **Clear** (  ) key. The contact is deleted after the confirmation.

# MANAGING CALL SETTINGS

## MAKING A CALL



- Press the **Green key** (  ) or select **Menu > Phone** and the **Call history** can be viewed.

The phone screen with last dialed number, missed calls and received calls are displayed.



OR

- From the **Home** screen, you can enter the number and initiate a call.



## DIALING A NUMBER VIA CONTACT

1. From the **Home** screen, select **Menu** (  ) > **Contacts** (  ).
2. Scroll to the contact and select the contact. The contact details are displayed.
3. Select the desired phone number to call the contact.



## ADDING A CONTACT FROM HOME SCREEN

1. From the **Home** screen, enter the desired number to be dialed.
2. Select **Add to contact** (  ).
3. Select **Create new contact** (  ).
4. In the **Add new contact** screen, add the name and other details for the contact.
5. Select **Option key > Save**.  
The contact is saved.


## VIEWING CALL HISTORY

1. Press the **Green key** (  ) or from the **Home** screen, select **Menu > Phone** (  ).
2. The **Recent calls** screen displayed with recently called, received, and missed calls.

## DELETING CALL HISTORY

1. Press the **Green key** (  ) or from the **Home** screen, select **Menu > Phone** (  ).
2. On the **Recent calls** screen, select **Option key > Delete selected call log**.

OR



Press **Clear** (  ) key on the keyboard to delete the selected call log.

3. A confirmation message is displayed to delete the selected call log. Select **Delete** to delete the call log. The selected call log is deleted.

## SPEED DIAL SETTINGS



With this option, the user can assign a contact to each key present in the keypad (2 to 9).

To set the speed dial,

1. Press the **Green key** (  ) or from the **Home** screen, select **Menu > Phone** (  ).
2. On Recent calls screen, select **Option key > Speed dial** settings.
3. Assign a contact to a number on the keypad from 2-9. Location #1 is reserved for voicemail and cannot be changed.
4. Long press a particular numeric key to initiate a call to the assigned contact.

## CALL SETTINGS

To view and modify call settings,

1. Press the **Green key** (  ) or from the **Home** screen, select **Menu > Phone** (  ).
2. On Recent calls screen, select **Option key > Call settings**. Different settings are:

## QUICK RESPONSES

When you are not able to answer an incoming call, you can send a quick response to the caller. To view and edit quick responses, select **Call settings > Quick responses**. Select the specific response message to edit. Edit the message and select **OK**.

## CALLS

### I. Calling Accounts:

#### SIP SETTINGS

- **SIP Accounts:**

To add a SIP account and configure your incoming and outgoing preferences:

1. In the **Call settings** screen, select **Calling accounts > SIP accounts**.
2. Enable Receive incoming calls to answer incoming Internet calls.  
This might reduce your phone's battery life.
3. Select **Option key > Add account** to configure a new SIP account.

4. Enter the following details and select **Option key** > **Save** to save the account:
  - **Username:** Username to login to SIP account.
  - **Password:** Password to login to SIP account.
  - **Server:** SIP server details.
  - **Optional Settings:** Select to view/modify or hide optional details such as authentication username, display name, outbound proxy address, port number, transport type and Send keep alive options.
  - **USE SIP CALLING**
    - Select **Calling accounts** > **Use SIP calling**.

A dialog box is open with the following options:

- **For all calls:** If this option is selected and when the phone is connected to Wi-Fi network or mobile Internet, each dialed call becomes an Internet call.
- **Only for SIP calls:** If this option is selected, only SIP call can be dialed.

#### • RECEIVE INCOMING CALLS

Enable **Receive incoming calls** to answer incoming Internet calls.

This might reduce your phone's battery life.

## II. VOICEMAIL:

- **Service:** Displays the Service name. It is displayed as **My carrier**.
- **Setup:** You can set a number for voicemail.
- **Sound:** Set the sound from the list.
- **Vibrate:** Check the box to set it to vibrate.

## III. Fixed Dialing Numbers:

- **Enable FDN:** Fixed Dialing numbers are enabled.
- **Change PIN2:** Change the PIN for FDN access.
- **FDN List:** Manage phone number list.

## IV. Call Forwarding:

You can forward your incoming calls to a number in the contacts or a new number, provided your network operator supports this service.

Select one of the following call forward options:

SETTINGS	DESCRIPTION
<b>Always forward</b>	Forward all incoming calls to a pre-designated number.

SETTINGS	DESCRIPTION
<b>When busy</b>	Forward calls when your phone is busy.
<b>When unanswered</b>	Forward calls when you do not answer incoming calls.
<b>When unreachable</b>	Forward calls when your phone is switched off or is out of coverage area.

## V. Additional Settings:

- **Caller ID:** You can choose **Network default**, **Hide number**, or **Show number**.
- **Call waiting:** When call waiting is enabled and the phone is in conversation, the incoming number is displayed when you receive a call. To activate call waiting in the Call settings screen, select **Additional settings**. Enable **Call waiting**.

## VI. Call barring:

- **Outgoing call barring:** You can select any of the options for call barring: **Outgoing call**, **International call** and **International roaming call**.
- **Incoming call barring:** You can select either **All calls** or **Roaming calls**.
- **Cancel all call barring:** You can cancel the call barring option for all the calls.
- **Change password:** You can change the password.

## CALL BLOCKING

You will not receive calls or messages from the blocked numbers.

## ACCESSIBILITY

If you enable TTY mode, hearing-impaired individuals can send and receive phone calls as text over the phone.


1. In **Call settings** screen, select **Accessibility** > **TTY mode** to view and modify TTY mode settings.
2. Set one of the following options:
  - **TTY Off:** disables TTY mode.
  - **TTY Full:** enables TTY mode for both incoming and outgoing calls. Set this for both hearing and voice assistance.
  - **TTY HCO:** enables TTY mode only for incoming calls. Set this for only hearing assistance.
  - **TTY VCO:** enables TTY mode only for outgoing calls. Set this for only voice assistance.

## SENDING MESSAGES

SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files, and so on.

You can use the Messaging app in your phone to send an SMS and MMS message to other mobile phones or any other equipment that can receive SMS and MMS.

 The MMS feature is available only if you subscribe to it from your wireless carrier.

To access the message function, from the **Home** screen, select **Messaging** (.

### SENDING SMS/MMS MESSAGES

You can send SMS and MMS messages to contacts in your phonebook and to new numbers that are not saved in the phonebook.

1. To create a SMS message, from the **Home** screen, select **Messaging** (.
2. Select **Option key > New message**.
3. Enter the contact name or the phone number in the **To** field.

If you enter an alphabet, all the contact names starting with that alphabet and containing that alphabet are displayed as a list. Scroll down to select the contact.

4. Enter the message.

When you add an attachment, the message is automatically converted to a multimedia message. MMS charges will apply, based on the operator.

5. You can add any multimedia attachment up to the size of  $\leq 600$  KB. To add an attachment, select **Options key > Attach photos/videos**. Browse to a specific folder and select the multimedia file to be attached.

6. Select **New message > Option key** and the following options are displayed:

ATTACHMENT TYPE	DESCRIPTION
<b>Add subject</b>	Add a desired subject in the <b>Subject</b> line.
<b>Attach photos/videos</b>	Attach photos and videos from the phone memory.
<b>Attach others</b>	Attach an audio file from the phone memory.
<b>Insert from Template</b>	Record a new audio using the sound recorder and attach.
<b>Insert contact</b>	Attach a contact available in the phone.
<b>Discard</b>	Delete the message.

7. Select **Option key > Attach others**. Select the attachment type from the below options:

ATTACHMENT TYPE	DESCRIPTION
<b>Capture picture</b>	Take a new photo using the mobile camera and attach.
<b>Capture video</b>	Take a new video using the camcorder and attach.
<b>Audio</b>	Attach an audio file from the phone memory.
<b>Record audio</b>	Record a new audio using the sound recorder and attach.
<b>vCard</b>	Attach a contact available in the phone.
<b>vCalendar</b>	Attach a calendar event.
<b>Slideshow</b>	Create new slideshow or edit the existing slides and attach.

### SEARCH

To search a particular message, on a new message window, select **Options key > Search**. Enter the key word to search a particular message.

## MANAGING MESSAGE SETTINGS

You can customize the way you want to view and filter the messages.

To view and modify the message settings,

1. To edit message settings, from the **Home** screen, select **Messaging** (🗨️).
2. Select **Option key > Settings**.
3. View and edit the following settings:

SETTINGS	DESCRIPTION
<b>NOTIFICATION</b>	
<b>Vibrate</b>	Enable vibrate alert for incoming messages.
<b>DISPLAY</b>	
<b>Group notification message</b>	Enable this notification message to auto combine the notification into one group.
<b>STORAGE</b>	
<b>Delete old messages</b>	Delete old messages automatically when the storage limit is reached.
<b>Text message limit</b>	Set the maximum number of SMS messages to be stored.
<b>Multimedia message limit</b>	Set the maximum number of MMS messages to be stored.
<b>Memory status</b>	Shows the memory used for SMS, MMS and the total memory used.
<b>ADVANCED SETTINGS</b>	
<b>Text (SMS) messages settings</b>	
<b>Delivery reports</b>	Request a delivery report for each message you send.
<b>Message template</b>	Edit the quick message template.
<b>Manage SIM card messages</b>	Manages the messages in the SIM card located under <b>Text Messages</b> .
<b>SMS Validity period</b>	Set the validity period.
<b>Enable WAP PUSH Service</b>	Enable to receive service messages.
<b>Multimedia (MMS) messages settings</b>	

<b>Group messaging</b>	Enable and use MMS to send a single message when there are multiple recipients.
<b>Delivery reports</b>	Enable to request a delivery report for each message you send.
<b>Read reports</b>	Enable to request a read report for each message you send.
<b>Auto-retrieve</b>	Enable to retrieve the messages automatically.
<b>Roaming auto-retrieve</b>	Enable to automatically retrieve messages while roaming.
<b>MMS Validity period</b>	Set the validity period: <b>Maximum</b> or <b>Two days</b>
<b>Creation mode</b>	You can set the mode for creating MMS message. Select one of the modes: <b>Restricted</b> , <b>Warning</b> and <b>Free</b> .
<b>Save As Attachment</b>	You can save the attachment in one of the following destinations: <b>Local</b> and <b>SD Card</b>
<b>OTHER SETTINGS</b>	
<b>Emergency Alerts</b>	You will receive active alerts and emergency alerts from the service provider.

## DELETING MESSAGES

To delete all the messages,

 
1. From the **Home** screen, select **Messaging** (🗨️).
2. Select the message and press **Option key > Delete selected thread** or select a message thread and press **Clear key** (⌫).
3. A confirmation message is displayed. Select **Delete** to delete the selected message.
4. To delete an individual conversation, select the conversation to be deleted, select **Delete** option and confirm the choice.

## BELL PUSH-TO-TALK SERVICES

---

Your Sonim XP5s device comes with pre-loaded PTT application.

Select the PTT button on the side of the XP5s phone or select the PTT icon on the panel of the Home screen.

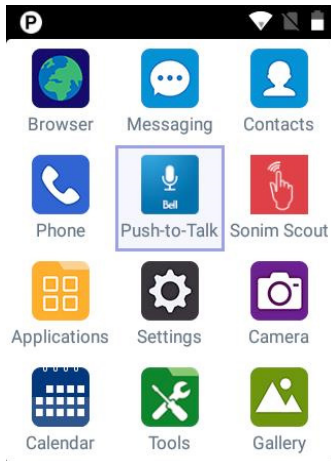

For more information on BELL PTT, refer to the link:

[https://support.bell.ca/web/guides/Mobility/Other/8.3\\_Android\\_PTT\\_Application\\_User\\_Guide.pdf](https://support.bell.ca/web/guides/Mobility/Other/8.3_Android_PTT_Application_User_Guide.pdf)






# SONIM SCOUT

 Sonim SCOUT is a solution that allows the user to register with Sonim and use a number of key enterprise features.

Sonim Cloud account required to fully utilize SCOUT capabilities. Visit <http://www.sonimcloud.com> for more information.

To access Sonim Scout,


- From the **Home** screen, select **Menu** (  ) > **Sonim Scout** (  ).

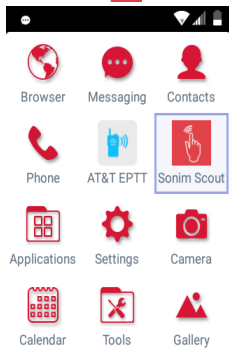

## SETUP

Setup tab consists of the following features:

 
- SonimSetupWizard
- SafeGuard
- App Updater

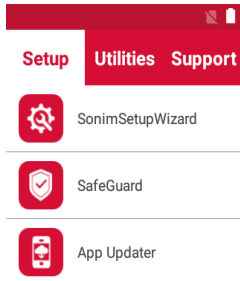

## UTILITIES

Utilities tab consists of the following features:

 
- Contact Transfer
- Sonim BLE Connect

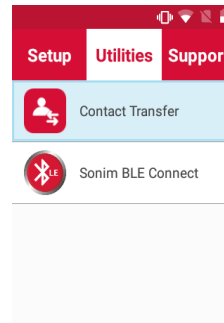

## SUPPORT

 Support tab consists of the following features:

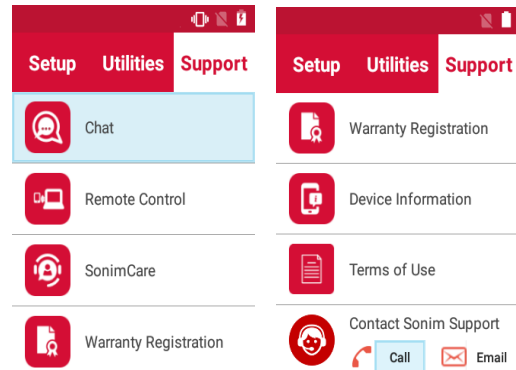


- Chat
- Remote Control
- SonimCare
- Warranty Registration
- Device Information
- Terms of Use
- Contact Sonim Support
  - Call
  - Email



## APPLICATIONS

### MUSIC




You can play music files and voice memos stored in your phone using the music application.

From the **Home** screen, select **Menu** (  ) > **Applications** (  ) > **Music** (  ).

- Select **Artists** to view the music files sorted based on the artists.
- Select **Albums** to view the music files sorted based on the albums.
- Select **Songs** to view the complete list of songs stored in your phone.
- Select **Playlists** to access the default playlists in the music folder.
  - Select **Recently added** playlist to view the music files that are recently added to the music folder.
  - Select **My recordings** playlist to access all your voice memo files.

### FM RADIO

You can listen to the radio through FM radio. A wired headset should be connected to enable FM radio.

1. To listen to the radio, select **Menu** (  ) > **Applications** (  ) > **FM Radio** (  ).
2. A message **Connect Headset** is displayed. Connect a wired headset with the side connector to enable FM Radio. **FM radio** icon is displayed on the **Notification** bar.
  - **Side Connector:** As the Sonim XP5s device does not support the jack, a side connector is used to plug-in the jack and listen to FM radio over the headset.



3. Select **Options** > **Radio On** to turn on the radio.
4. Select **Options** and the following options are displayed:
  - **Auto Scan:**
    - On selecting **Auto Scan** for the first time, the device starts scanning all available stations and a pop-up message is displayed; **Scanning for all stations.**
    - Once the scanning is completed, a confirmation message is displayed on **All Channels** screen; **Scan Complete: Number of channels scanned.**
    - If any channel is present in **Preset** list, select **Auto Scan** and a pop-up message is displayed; **Clear the preset list?** Select **Yes** to scan all available channels.
  - **All Channels:** All scanned channels are listed.
  - **Preset:** Connect to a particular station and select **Options** > **Add to presets.** The selected channel is added to the preset list. Select **Preset** > **Options** and the following options are displayed:
    - **Rename:** You can rename the channel/station.
    - **Remove from presets:** Selected channel is removed from the preset.
  - **Loud Speaker/Wired Headset:** You can set the radio on loud speaker. When you set the radio on loudspeaker mode, it displays **Wired Headset** as an option.
  - **Sleep:** You can turn off the radio after a selected time frame:
    - 15 minutes
    - 30 minutes
    - 45 minutes
    - 1 Hour
  - **Start Recording:** You can record the audio which is broadcasted on the radio to listen to the same later.
  - **Settings:** The following options are displayed under **Settings:**
    - **Regional Band:** The regional band with frequency range is displayed.
    - **Audio Output Mode:** Select any of the following options as a output mode: **Stereo** or **Mono.**
    - **Alternate Frequency:** Check this option enable/disable the auto selection of alternate frequency.
    - **Revert to Factory Defaults:** This option deletes all the settings including Presets. Select **OK** to confirm.
  - **Radio off:** Select this option to turn off the radio.

## FILE EXPLORER

You can view/edit/delete/share the files stored in the phone through **File Explorer** (  ).

To view the files, select **Menu** (  ) > **Applications** (  ) > **File Explorer** (  ).

Select any folder and press **Option key** to view the following options:

- **Recent:** Displays the recent files captured or stored.
  - **Share:** Share the file or folder via Messaging/Bluetooth.
  - **Delete:** Delete the existing folder.
  - **Copy to:** Copy the contents of the folder.
  - **Move to:** Move the contents of folder.
  - **Properties:** View the properties of the folder.
  - **Select:** Select a particular folder.
  - **Downloads:** Displays the downloaded files.
  - **Exit:** You can select Exit option for exiting from File Explorer.
- **Downloads:** Displays the different folder under Downloads.
  - **Share:** Share the file or folder via Messaging/Bluetooth.
  - **Delete:** Delete the existing folder.
  - **Copy to:** Copy the contents of the folder.
  - **Move to:** Move the contents of folder.
  - **Rename:** Rename the existing folder.
  - **Properties:** View the properties of the folder.
  - **Select:** Select a particular folder.
  - **Sort by:** You can sort the folder using **Sort** option. Sorting options are **By Name**, **By Date Modified** and **By Size**.
  - **New folder:** You can create a new folder.
  - **Exit:** You can select **Exit** option for exiting from File Explorer.
- **XP5800:** Displays the different folders in the device drive.
  - **Search:** Search for the file and folder.
  - **Delete:** Delete the existing folder.
  - **Copy to:** Copy the contents of the folder.
  - **Move to:** Move the contents of folder.
  - **Rename:** Rename the existing folder.
  - **Properties:** View the properties of the folder.
  - **Select:** Select a particular folder.
  - **Sort by:** You can sort the folder using **Sort** option. Sorting options are **By Name**, **By Date Modified** and **By Size**.
  - **New folder:** You can create a new folder.

- **Exit:** You can select **Exit** option for exiting from File Explorer.






If SD card is inserted, all the files in the SD card can be viewed/edited/deleted/shared from File Explorer.

## BACKUP AND RESTORE

If you need to replace your device or erase its data, you can restore your data for any accounts that were previously backed up.

To back up your data:

1. From the **Home** screen, select **Menu** (  ) > **Applications** (  ).
2. Select **Backup and Restore** (  ).
3. Select **Backup**.

All your contacts, Calendar, SMS and MMS data will be backed up and media content like photos, audio and videos will be moved to SD card.

A warning message is displayed **Backup may take few minutes. Please do not perform other operations during this time.**

Select **OK** to start the backup.




4. Select **Restore**.  
The contacts, Calendar, SMS and MMS are restored.



Without SD card, the user cannot take device back-up.

## DOWNLOADS





Use the Downloads screen to view, open, or delete the downloaded files.

1. From the **Home** screen, select **Menu** (  ) > **Applications** (  ).
2. Select **Downloads** (  ).
3. Select **Options** > **Select** to select the downloaded file to be opened, viewed, or deleted.

## TOOLS





### CLOCK

You can view the time of major cities in different time zones using this function.

1. From the **Home** screen, select **Menu** (  ) > **Tools** (  ).
2. Select **Clock** (  ).
3. Select **World clock icon** (  ) located on the top of the screen. To add a city, select **Option key** > **Add city**. Select the check boxes next to the cities to add them to the **Clock**.
  - The local time in the home city is displayed in the upper half of the screen.
  - To set the home city, select the desired city from the list. This city will now be added to the selected cities list. The selected city is set as the home city.

### ALARM





You can set an alarm for a particular time.

1. From the **Home** screen, select **Menu** (  ) > **Tools** (  ).
2. Select **Clock** (  ).
3. Select **Alarm** activation icon (  ) on the top of the screen.
4. Select **Option key** > **Add** to add a new alarm.
5. To set a recurring alarm, select **Option key** > **Edit**. You can choose and set the following options:
  - **Time:** You can set the desired time.
  - **Repeat:** You can select the days in a week to repeat the alarm for all the selected days.
  - **Alarm Ringtone:** Select the alarm ringtone.
  - **Label:** You can name the alarm.
  - **Vibrate:** Enable this option to set the device on vibrate when the alarm rings.
6. Select any of the ringtones from the **Default alarm tone sound** present, and select **OK**.







The alarm will work even when the phone is set in silent mode.

### STOPWATCH




1. From the **Home** screen, select **Menu** (  ) > **Tools** (  ).
2. Select **Clock** (  ) > **Stop watch** (  ).
3. Select **START** and **STOP** to run the stop watch.

### TIMER

1. From the **Home** screen, select **Menu** (  ) > **Tools** (  ).
2. Select **Clock** (  ) > **Timer** (  ).
3. The following actions can be performed:
  - **RESET, START, STOP** and **LAP**






### CALCULATOR

The default calculator in this phone is designed to perform simple mathematical calculations and the advanced panel is for scientific calculations.

1. From the **Home** screen, select **Menu** (  ) > **Tools** (  ) > **Calculator** (  ).
  - To enter the numbers, select the numeric keys.
  - To use mathematical operators, select the respective operation key on the keypad.
  - Select = for the final result.
2. Select **Option key** > **Advanced panel** for scientific calculations. You can toggle between **Basic panel** and **Advanced panel**.

### SOUND RECORDER

You can record voice memos using the sound recorder. To access the sound recorder,





- From the **Home** screen, select **Menu** (  ) > **Tools** (  ) > **Sound Recorder** (  ).
  - To record an audio file, select **Record** (  ).
  - To stop the recording, select **Stop** (  ).
  - To save the voice memo, press left arrow key and select **Save**.
  - To exit without saving, press left arrow key and select **Discard**.
  - To play the recorded file instantly, press right arrow key and select the file to be played. Press **Center** key to play the voice memo.

## OTHER APPLICATIONS

---

### CAMERA



The Sonim XP5s has a rear camera with a 5MP fixed focus for taking pictures. The pictures are saved in the **Gallery**.

1. From the **Home** screen, select **Menu** (  ) > **Camera** (  ).
2. Select Camera mode to set the following modes:
  - **Normal** (  ): To shoot a picture in normal mode, press **center** key to capture the picture. Use Left and Right navigation keys for Zoom in and Zoom out.
  - **Video** (  ): Press the **Center** key to start/stop a video recording. You cannot pause the recording and once you hit the center key, your video will stop recording.
3. Select Option key to view or change camera settings such as **Flash**, **Exposure**, **File Format**, etc.

### CALENDAR



The Calendar helps you to set appointments, schedule reminders and alerts and repeat them if required. You can also view your saved tasks on a daily or weekly basis.

To access calendar;

1. From the **Home** screen, select **Menu** (  ) > **Calendar** (  ).
  2. To change the calendar view, choose **Month** or **Agenda** from **Options** menu.
  3. Select **Options** key to view the list of the following available options:
    - **Today**: Access current date events.
    - **New event**: New event can be added by selecting this option.
    - **Agenda**: Select each agenda to view the event details.
    - **Search**: You can search for a particular event.
    - **Delete Events**: Select the **event** > **Option key** > **Done** to delete the selected event. Select **Select all** to delete all the events.
- When you have an event, the **Delete events** option is enabled.
- **Settings**:
    - Displays the **General settings** of the calendar.
    - Displays the **Build version** in **About Calendar**.



### GALLERY

The pictures, videos, and screenshots captured from the camera are stored in **Gallery** and can be viewed later.

From the **Home** screen, select **Menu** (  ) > **Gallery** (  ).

You can view the photo album, screenshots, and the individual pictures.

### BROWSER

1. From the **Home** screen, select **Menu** (  ) > **Browser** (  ).
2. Enter the URL to search for the desired information or any website.
3. Select **Option key** and you can view the list of options such as;
  - Go to URL
  - Homepage
  - Switch Tabs
  - Refresh
  - Forward
  - Bookmarks
  - Save to bookmarks
  - History
  - Copy URL
  - Share page
  - Find on page
  - Request desktop site
  - Settings
  - Exit

## REGULATORY INFORMATION - USA MARKET

---

### RF EXPOSURE INFORMATION (SAR)

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model device XP5800 (Type number PG2112) as reported to the FCC:

- When tested for use at the ear is 0.98W/kg
- When worn on the body, as described in this user guide, is 1.35W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on **FCC ID: WYPPG2132**.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with

a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.

### FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC CAUTION

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all Wi-Fi product marketed in US must be fixed to US operation channels only.
- Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

## HAC RATING

The FCC has created a rating system for cellular phones regarding their HAC-related performance. This rating helps consumers with hearing disabilities to find phones that work well with their hearing aid devices. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI C63.19-2011) which contains two rating standards: an "M" rating from 1 to 4 for hearing aids operating in microphone mode, and a "T" rating from 1 to 4 for hearing aids operating in tele coil mode. M-Rating stands for Microphone rating and indicates the amount of reduction of RF interference between the telephone and the hearing aid in acoustic coupling mode (also called microphone mode). Phones rated M3 or M4 meet FCC requirements and generate less interference to hearing devices set in microphone mode. T-Rating stands for telecoil rating and represents inductive coupling with hearing aids that are operating in telecoil mode. A telecoil is a small piece of tightly wrapped wire, built into some hearing aids.

The microphone of a hearing aid picks up all sounds, the telecoil only picks up an electromagnetic signal from the telephone. Thus, users of telecoil-equipped hearing aids are able to communicate over the telephone without the amplification of unwanted background noise. Phones rated T3 or T4 meet FCC requirements and generate less interference to hearing devices set in telecoil mode. A combination of M-rating and T-rating defines the final HAC rating and is a deciding factor in selecting cellular phones for people with hearing problems. A HAC compliant phone could be rated:

- M3/T3
- M3/T4

- M4/T3
- M4/T4

These ratings assist hearing device users to find phones that are compatible with their hearing devices. Ratings are shown on the phone's box or label. The ratings are not guaranteed for suitability. The results vary depending on the individual's hearing loss and the immunity characteristics of the used hearing device, i.e. its resistance to interference. The best way to evaluate the suitability of the phone is to try it with the intended hearing aid device.

The model XP5800 have been tested for hearing aid device compatibility and complies with the Federal Communications Commission (FCC) requirements.

These devices are rated M3/T4.

## ISED RF EXPOSURE STATEMENT (IC)

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with minimum distance 1.5 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

## ISED NOTICE

This device complies with Innovation, Science and Economic Development Canada (IC: 8090A-PG2132) license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

## HAZARDOUS LOCATION USAGE WARNING

Determine by inspection that the following information is made available to the user by one or more of;

- Printed on the label for the battery
- Printed on the label for the host device
- Printed in the owner's manual
- Posted in a help file or Internet web site



Do not disassemble, open, crush, bend, deform, puncture or shred.



Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.



Only use the battery for the system for which it is specified.



Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.



Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.



Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard. Only authorized service providers shall replace battery (If the battery is non-user replaceable).



Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.



Promptly dispose of used batteries in accordance with local regulations.



Battery usage by children should be supervised.



Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.



Improper battery use may result in a fire, explosion or other hazard.



# INDEX

---

## A

- Accessibility 24
- Account Sync 28
- Airplane Mode 17
- Alarm
  - Timer 36
- Applications
  - Music
  - FM Radio
  - File Explorer 11, 12, 21
- Apps 20

## B

- Backup 35
- Battery 7
- Battery Usage
  - Charging 7
- Blocked Numbers 26
- Bluetooth
  - Pairing 17
- Browser 37

## C

- Calculator 36
- Calendar 37
- Capturing Screenshot 12
- Child Safety 6
- Contacts
  - Export
  - Import
  - Share 16, 25, 26, 27

## D

- Data Warning 17
- Date 24
- Display 19
- Downloads 35

## E

- Emergency Info 22
- Encryption 22
- Export 26

## F

- Factory Reset 23
- File Explorer 34
- FlexT9 Text 23
- FM Radio 34

## G

- Gesture 21

## H

- Hazardous Location 40
- Home Screen 11
- Hotspot 17

## I

- Import 26

## K

- Keyboard 23
- Keyboard Dictionaries 33

## L

- Language 23
- Location 22

## M

- Memory
  - App usage 21
- Messages 30
- Missed Events 15
- Mobile Network 17
- My Notifications 14

## N

- Noise Cancellation
  - FENS 20
- Notification 20

## O

- Operations 12

## P

Phone Specifications 9  
Power Optimization 8  
Programmable Key 23

## Q

Quick Profile Switch 20  
Quick Settings 15

## R

Restore 35

## S

Scout 33  
Search 14  
Security 22  
Security Settings 22  
Setup wizard 33  
Side Connector 34  
SMS/MMS Message 30  
Sound 19  
Sound Recorder 36  
Stopwatch 36  
Storage  
    Internal Share 21  
Support 33

## T

Temperatures 6  
Tethering 17, 18  
Text Entry 13  
Time 24  
Toggle Torch 21  
Torch 15

## U

USB Power Saving 21  
Utilities 33

## V

VPN 18

## W

Wallpaper 14  
Wi-Fi 16

WPS 16

## X

XP5s 10